

 
## Witt Classic Coffee machine



EN: 1-8

## COFFEE MACHINE INSTRUCTIONS

Model no.: CM2083DA

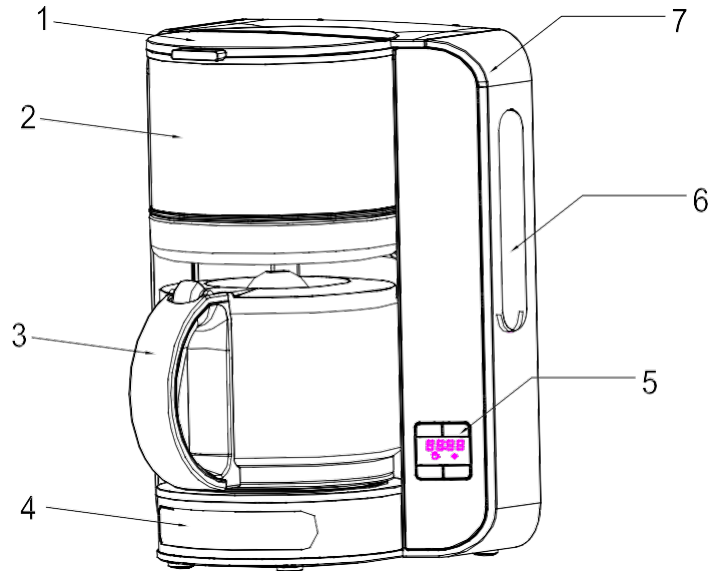

**220 - 240VAC 50/60Hz 915 - 1080W**

---

### OVERVIEW OF THE COFFEE MACHINE

1. Lid / 2. Filter basket / 3. Coffee carafe / 4. Base / 5. Operating panel / 6. Water level indicator / 7. Water tank

## IMPORTANT SAFETY INSTRUCTIONS

- The device may be used by children above the age of eight if they are taught how to use the device properly and if at first they are supervised by someone who is responsible for their safety. Keep an eye on children to ensure that they do not play with the device. Children over the age of eight may clean or maintain the device, but only if they are being supervised. Keep the device and the power cord away from children under the age of eight.
- Individuals who, because of limited physical, sensory or mental capacity or who because of lack of experience or knowledge are incapable of using the device safely may only use the device when someone who is responsible for their safety has taught them how to properly use the device and follow the safety instructions.
- Children may not play with the device.
- Making repairs or alterations to the device and changing power cords may only be done by professionals trained in this kind of work or customer service staff.
- This device is intended for household use and similar applications, such as:
  - Being used by kitchen staff in stores, offices and other working environments
  - Being used at agricultural enterprises
  - Being used by hotel/motel guests and in other kinds of residential environments, including
    - Bed & breakfasts.
- Never lower the device in water or other fluids.
- The surface of the heating plate may still be warm after use.
- Only use the device as specified in these instructions. If you do not operate the device correctly, there is the risk of getting an electric shock.
- Ensure that the electricity in your home (voltage and frequency) is a perfect match with the information on the device's type plate. If there is no match, please contact your retailer and do not use the device.
- Do not place the device on hot surfaces.
- Do not use the device outdoors.
- Remove the plug from the socket:
  - if there are problems when coffee is brewing
  - before cleaning the device.
- Ensure that the power cord does not come into contact with hot surfaces.
- Keep the device out of reach of children. Ensure that children do not pull the power cord or push the device.
- Do not fill the water tank with water before the device is turned on.
- The heating plate is warm when the device is being used. Do not touch the heating plate - you may get burns!
- Only use fresh, cold water to fill the water tank.

### WHEN USING IT FOR THE FIRST TIME

In order to get the optimal taste, it is recommended to use the coffee machine with clean water 2-3 times before brewing your first pot of coffee. Turn off the device when the water has run through and let the device cool down for five minutes. Then repeat the procedure with fresh water.

### BREWING COFFEE

- Fill the water tank with water. Ensure that the water level is not below the minimum or "MAX" markers. Only use fresh, cold water. The number of cups that will be brewed can be seen on the water tank.
- Insert a new size 1x4 coffee filter and add the desired amount of coffee to the filter.
- Turn on the device. Wait until the coffee has finished brewing and there is no more water left in the filter basket.
- For large cups: Use 5-6g of ground coffee per cup.

### DO YOU WANT TO BREW MORE COFFEE RIGHT AWAY?

If you have brewed a single cup of coffee and want to make more right away, then turn off the coffee machine and let it cool down for at least five minutes. After that, you can refill the water tank.


### CLEANING AND MAINTENANCE

- Always remove the plug from the socket before cleaning the device.
- Never lower the device into water or other kinds of fluid.
- Always use a moist rag to clean the device.
- The carafe and filter basket can be washed in hot soapy water.

### DESCALING

- Descale your coffee machine on a regular basis.
- Operate the device as described above, but now fill the water tank with regular vinegar and do not put coffee in the filter basket.
- After the descaling process is completed, run clean water through the device a few times in order to remove any residual vinegar or chalk.

### HOW TO OPERATE

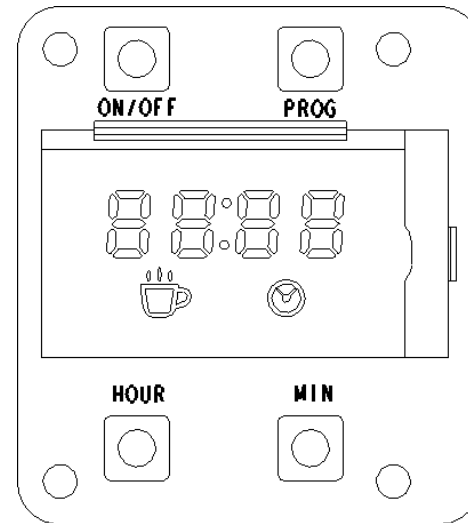

 ON/OFF

P – PROG. (programme)



H – HOUR (hours)

M – MIN (minutes)

#### 1. Primary functions

 - (1) Delayed start (0~24 hours) and immediate heating up.  
A delayed start requires that you set the time and set up the Delayed start. Once the timer hits the specified time, the device will begin heating up and then shut down automatically after 40 minutes. For an immediate heating up, press the On/Off button - then the device will either begin heating up or it will turn off.
- (2) Auto shutdown: once the device has been turned on for more than 40 minutes without being operated, it will automatically turn off.

#### OPERATING PANEL

- (1) On/Off (): When the device is attached to a power source, the screen will blink and display 0000. If you press the On/Off button, the advice will go into standby mode and the screen will stop blinking (0000 will still be displayed). The operating panel's other buttons can only be used once the device is in standby mode. When you press the On/Off button again, the device will start heating up and the icon will be displayed. 

If you press the On/Off button again, the device will stop heating up and go back in standby mode.

- (2) "HOUR (H) (specify hours: 0-23)": Press the H button once the device is in standby mode and specify the hours. If you hold down the H button, the hours will change faster.
- (3) "MIN (M) (specify minutes: 0-59)": Press the M button once the device is in standby mode and specify the minutes. If you hold down the M button, the minutes will change faster.
- (4) Delayed start/ "Programme (P)": Once the hours and minutes are specified, you can then set a timer.
  - a. Press the P button and access the menu for Delayed start. The screen will show the icon



You can pre-set the time by using the H and M buttons as described above.

- b. Then quickly press the P button again to confirm the Delayed start. If no settings are specified, the device will automatically return to standby mode.
- c. Press the P button to see what has been programmed.

## DISPLAY

- (1) The device is attached to a power source: The screen will display 0000 and blink constantly. The device will go into standby mode once the On/Off button is pressed.
- (2) Standby: The screen will show the specified time. If there has been initiated a Delayed start, the icon for this will also be displayed.



- (3) Heating up: The screen will show.



- (4) Delayed start (P): The display will show

## HOW TO OPERATE

- (1) Starting up phase: Attach the device to a power source and then the screen will display "0000" and blink. Press the On/Off button once to enter standby mode - it will be possible to change all the settings once the display shows "0000" constantly without blinking. Press the On/Off button again, then the device will immediately start heating up. If the device has been turned on for more than 40 minutes without being operated, the device will shut down automatically and go into standby mode.
- (2) Set the clock: Press the H and M buttons to set the clock.
- (3) Delayed start: Press the P button once (when the device is in standby mode) to access Delayed start. Then press the H and M buttons and specify the time you want it to start. Now press the P button again quickly to confirm the Delayed start, or hold the button down for more than five seconds to leave the menu. The clock needs to be set first, otherwise you cannot pre-set the device. The device will start heating up automatically once the Delayed start begins. After 40 minutes, the device will shut down automatically.
- (4) You can find the Delayed start function by pressing the P button.
- (5) Immediate heating up:
  - a. Press the On/Off button once during the startup phase to make the device go into standby mode. Then press the button again to make the device start heating up.
  - b. If you press the button again, the device will turn off.

## SAFETY FUNCTIONS

Once the device has been turned on for more than 40 minutes without being operated, it will automatically turn off.

## DISPOSING OF THE DEVICE



The symbol means that the product should not be thrown out together with regular household waste. Instead, it should be disposed of at an authorised recycling station which is suitable for this purpose or returned to a retailer that offers disposal services. Contact your local city council if you need more information.

## WARRANTY AND SERVICE

There is a 2-year warranty period if your new product stops working due to manufacturing or material faults which begins from the documented date of purchase. The warranty covers materials and the cost of labour. When inquiring about service, please state the product name and serial number. You can find this information on the type plate. You can write down the information here in these instructions so that you have them at hand. This makes it easier for the service technician to find the correct spare parts.

### The warranty does not cover:

- Faults and damage that are not due to manufacturing or material issues
- Damage caused by failure to properly maintain the device - including failing to clean it
- Fire and/or water damage or moisture damage on the product
- Damage caused during transport if the product was transported without proper packaging
- Damage caused by the use of unoriginal spare parts
- Damage resulting from failing to follow the instructions on how to use the device
- If the device has not been set up/assembled as specified in the instructions
- If non-professionals have installed or repaired the product
- Batteries or any other parts subject to normal wear and tear

### Damage during transport

If the product is damaged during transport and this is discovered when the retailer delivers the product to the customer, this is exclusively a matter between the customer and the retailer. In cases where customers have handled the transport of the product themselves, the supplier shall not be liable for any potential damage during transport. Any damage caused during transport must be reported immediately and no later than 24 hours after the product has been delivered. If not, the customer's claim will be rejected.

### Unnecessary service

If the product is sent in to be serviced and it turns out that the fault could have been fixed independently by following the product's instruction manual, the customer will need to pay the service fee.

### Commercial purchases

Commercial purchases are all purchases of devices that are not intended to be used in private households but instead intended to be used for commercial purposes (in restaurants, cafés, canteens, etc.) or intended to be rented out or otherwise used by multiple users in turn.

There is no warranty offered for commercial purchases, as this product is only intended for regular household use.

## Service

For service and spare parts in England and Ireland please call below-mentioned number and you will be directed accordingly or send us an email.

Witt UK & Ireland Ltd.

(44) 148 351 6633 / [info@witt.dk](mailto:info@witt.dk)

We accept no liability for printing errors.

The manufacturer/distributor cannot be held liable for damage to products or individuals if the safety instructions were not followed. The warranty shall not cover cases where the instructions have not been followed.





